
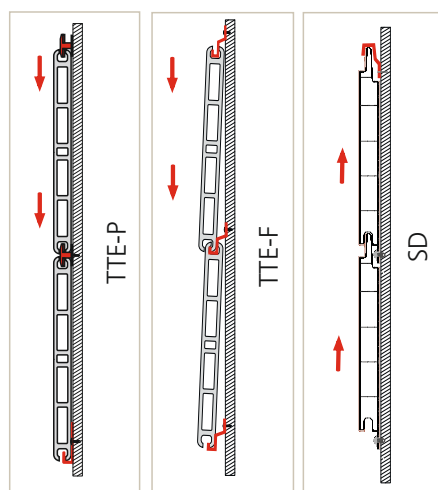
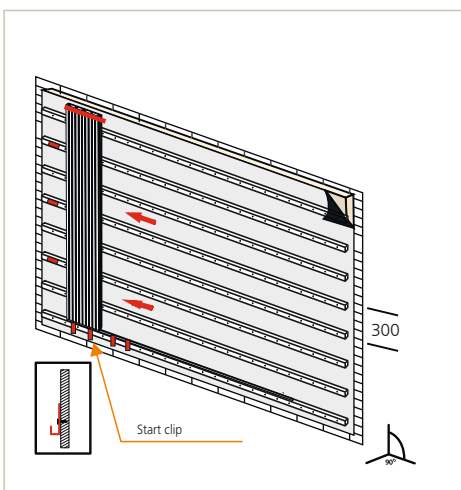


Basic installation principles

Due to properties of WPC it is necessary to keep a space at least 10 mm when connecting the boards as well as between the boards and the "F" profiles for free thermal elongation processes. The edge of a board cannot extend beyond fixing (traverse) (A). Recommended distance between traverses - 30 mm.

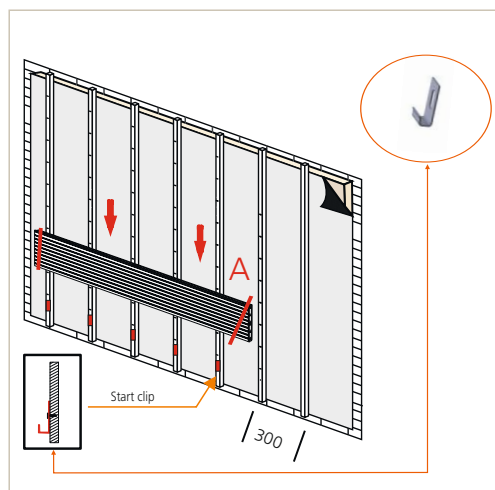

***Any claims must be brought before mounting.**